

It's not rocket science,  
but following these  
instructions will make  
installing your seat covers  
a lot easier.

We promise.



[ttcovers.com/52114video](https://ttcovers.com/52114video)

T52237 - Tactical Driver's Seat  **TigerTough**



Basically, you break it, we buy it.  
Seriously.

**Your new seat covers are covered by a two-year, unconditional, no B.S. warranty.**

That means that if you manage to abuse them to a point that they can't perform like they're supposed to within two years of when you bought them, we'll make it right. Depending on what is more practical, we'll either repair or replace the damaged cover.

**Register your seat covers at:  
[ttcovers.com/RegisterMyCovers](http://ttcovers.com/RegisterMyCovers)**

# INSTALLATION GUIDE



## **T52237 Tactical Driver's Seat**

FORD ESCAPE (2013 - 2017)



# BILL OF MATERIALS

ITEM	QUANTITY
Driver Seat Back Cover	1
Driver Seat Bottom Cover	1
Seat Headrest Cover	1

Seat Backs & Bottoms have tag signifying Driver or Passenger.

**Ensure airbag patch (same side as the TigerTough tag) goes on the outside edge of the seat.**

Watch the install video here:  
[www.ttcovers.com/52114install](http://www.ttcovers.com/52114install)

## General care instructions:

1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
2. Seat covers can be removed and machine washed on low temperature setting using mild detergent.  
Drip dry or machine tumble dry on a no heat cycle.  
Straps should be coiled and secured with rubber bands for machine washing and drying.
3. Soil may be removed with spray cleaner or detergent and water.
4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
5. Do not use bleach.



# 1 - Preparation






- 1.1 - Remove headrest by pressing in tabs at base of headrest and pulling up
- 1.2 - Slide seat forward and raise to highest position, if possible.

## 2 - Install Seat Bottom Cover



- 2.1 - Undo the two plastic clips and the two elastic straps holding seat back flap down, from under seat bottom.
- 2.2 - Push clips back in to seat bottom.
- 2.3 - Place cover over seat bottom.
- 2.4 - Push top flap between seat back and seat bottom.
- 2.5 - Run outside string straight down between seat bottom and plastic trim, where seat back and bottom meet. Inside string goes under seat, in front of rear seat mount.
- 2.6 - Tuck side of cover behind plastic trim on outside of seat.
- 2.7 - Pull strings tight under the seat, and secure using the StringLock device (see next page). The tighter, the better. This is what keeps your cover from shifting.
- 2.8 - Run flap from front of seat under the seat and over all brackets and wiring, except last round bar.
- 2.9 - Pull flap as tight as possible and fasten to Velcro on top flap.

# THE STRINGLOCK

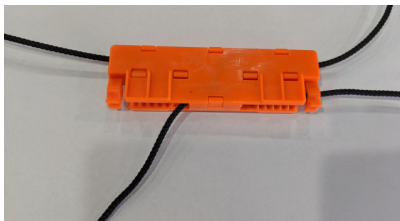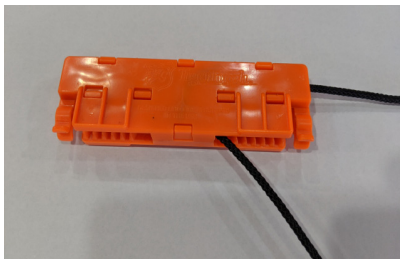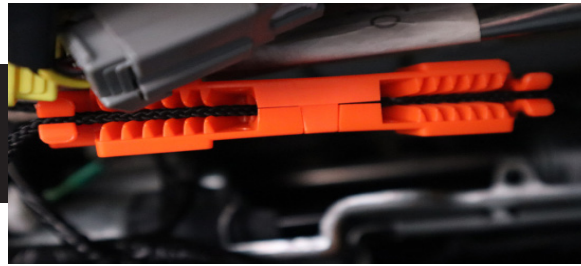

1

Run one string through the channel on the end of the StringLock.

2

Pull the string tight, pulling the StringLock towards one edge of the seat. Press the string into the clamp, locking it in place.

3

Run the second string through the StringLock just like the other one.


4

Pull the loose end of the second string until everthing is tight and lock it into place as well.



Watch the video  
[ttcovers.com/stringlock](http://ttcovers.com/stringlock)


## 3 - Install Seat Back Cover

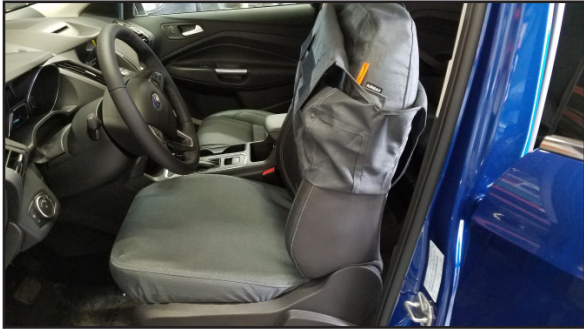

- 3.1 Turn cover 3/4 of the way inside out.
- 3.2 Pull cover over seat back, pulling tight against the top of the seat.
- 3.3 Align the holes in the cover with the headrest holes on the seat back.
- 3.4 Work the plastic trim around the headrest holes through the holes in the seat cover.
- 3.5 Pull the cover down over the seat, unrolling as you go.
- 3.6 Tuck factory seat flap up inside cover.
- 3.6 Push the front flap of the cover between the seat back and seat bottom.
- 3.7 Pull flap tight and fasten to Velcro under seat bottom.
- 3.8 Pull the rear flap tight and fasten to Velcro under seat bottom.



## 4 - Install Headrest Cover

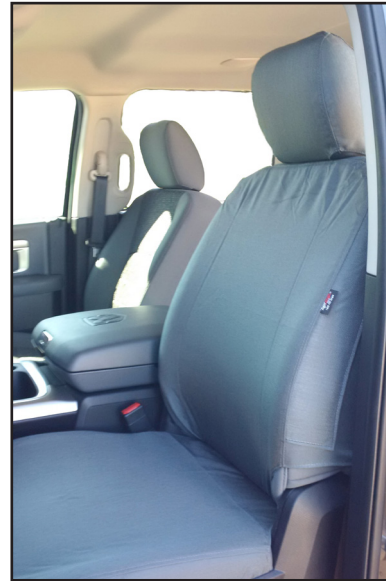

- 4.1 - Put headrest back in seat by pressing plastic tabs and pushing down on headrest.
- 4.2 - Pull cover over head rest with "loop" Velcro in front and "hook" Velcro in rear.
- 4.3 - Fasten Velcro tabs together under headrest.